Mini SINGER®

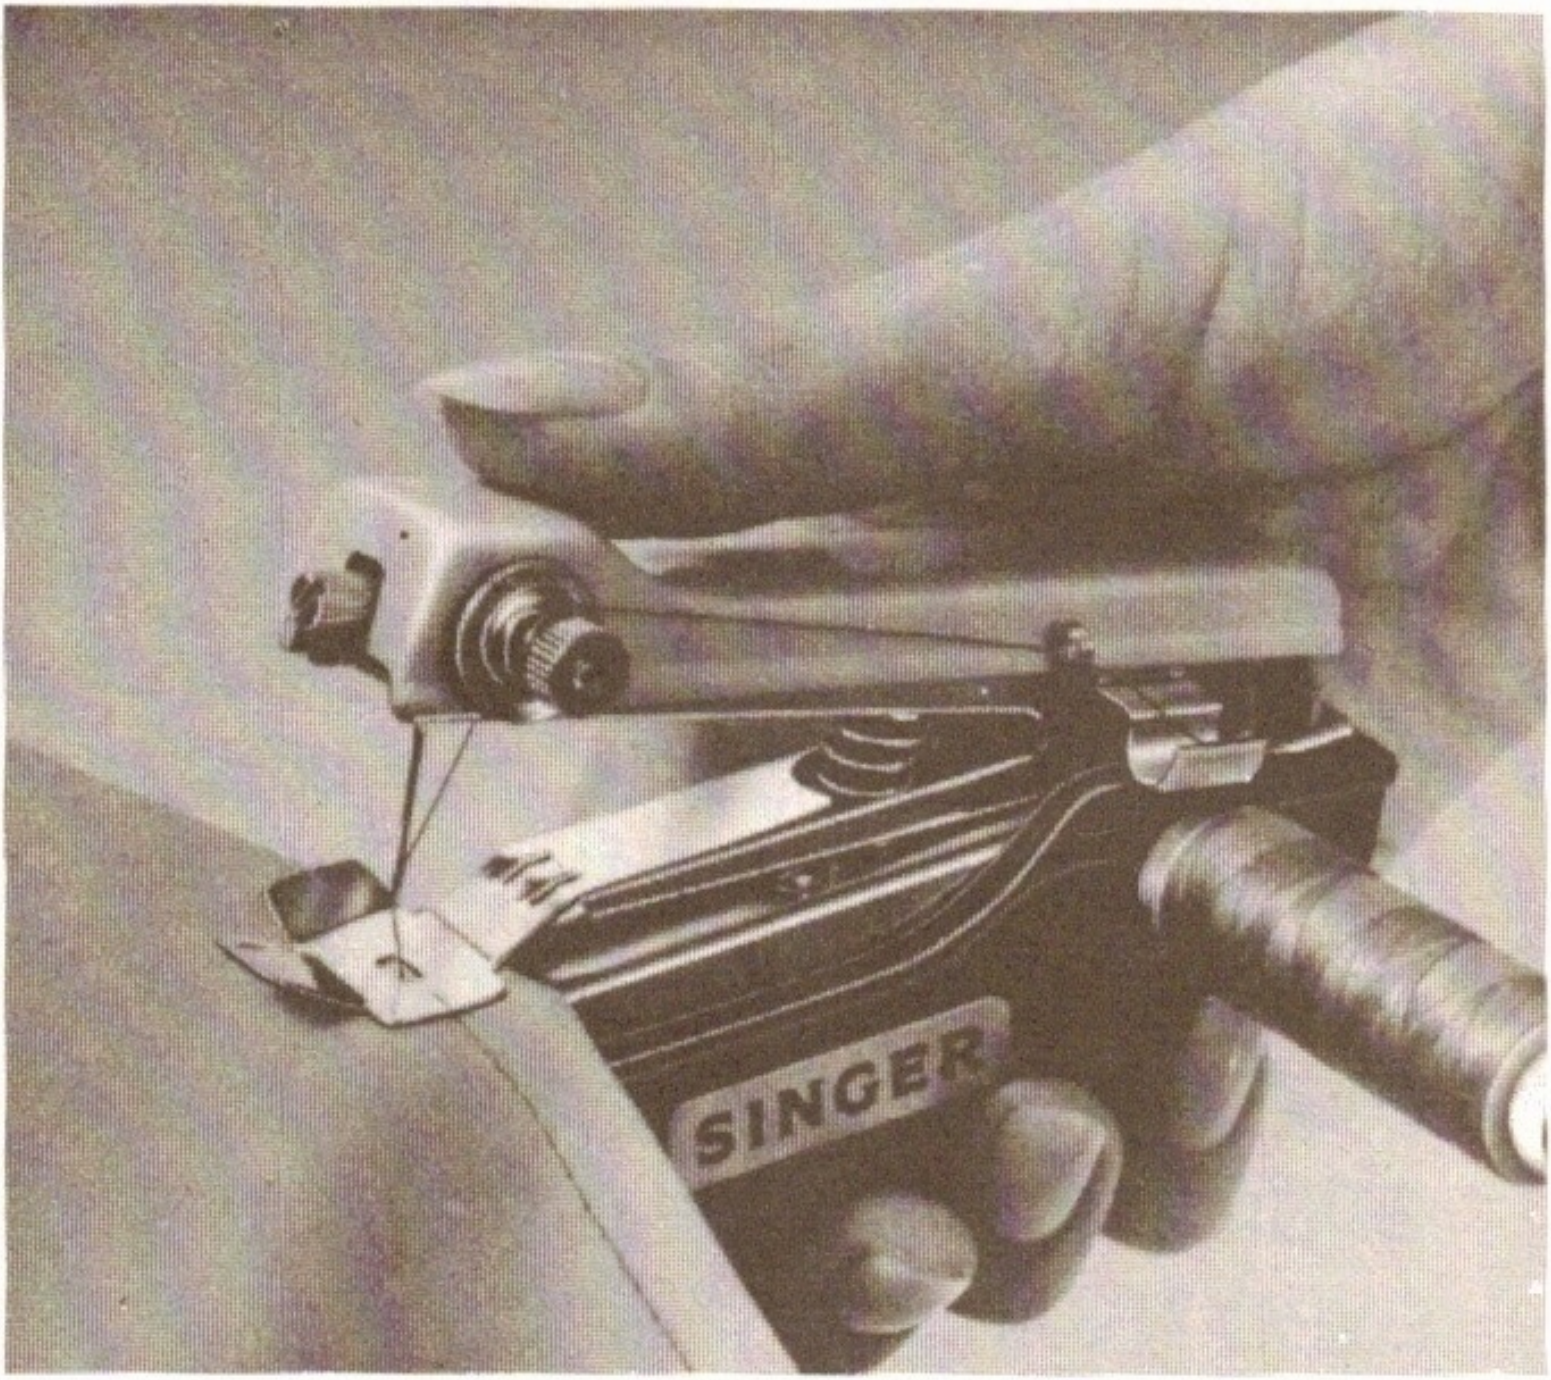

HAND HELD STITCHING DEVICE

REORDER FORM
ACCESSORY TICKET

Mini

Packet includes:

- 3 each Needles # 1111/07 90/14
- 1 each Needle Threader
- 1 each Reorder Form

Total cost including mailing and handling $1.95

Send check or money order payable to:

Singer Sewing Company

Part No. 65-442352-000

Congratulations! You've acquired the Mini, a hand-held mending device ideal for small mending needs.

Lightweight, easy to carry, and easy to use, the Mini sews in a durable chain stitch, feeding the fabric automatically past the needle as it stitches.

The Mini mending device can be taken anywhere, providing emergency mending when it's needed most. You'll find it extremely convenient. Pockets and hems can be sewn without even having to take off the garmet. And all is done with the precision of machine stitches.

The Mini. Small in size. Big in performance.

Singer in quality.

INSTRUCTIONS

1. HOLDING THE MINI

Take the Mini in hand as shown at right, with thumb in position to press downward on the upper part.

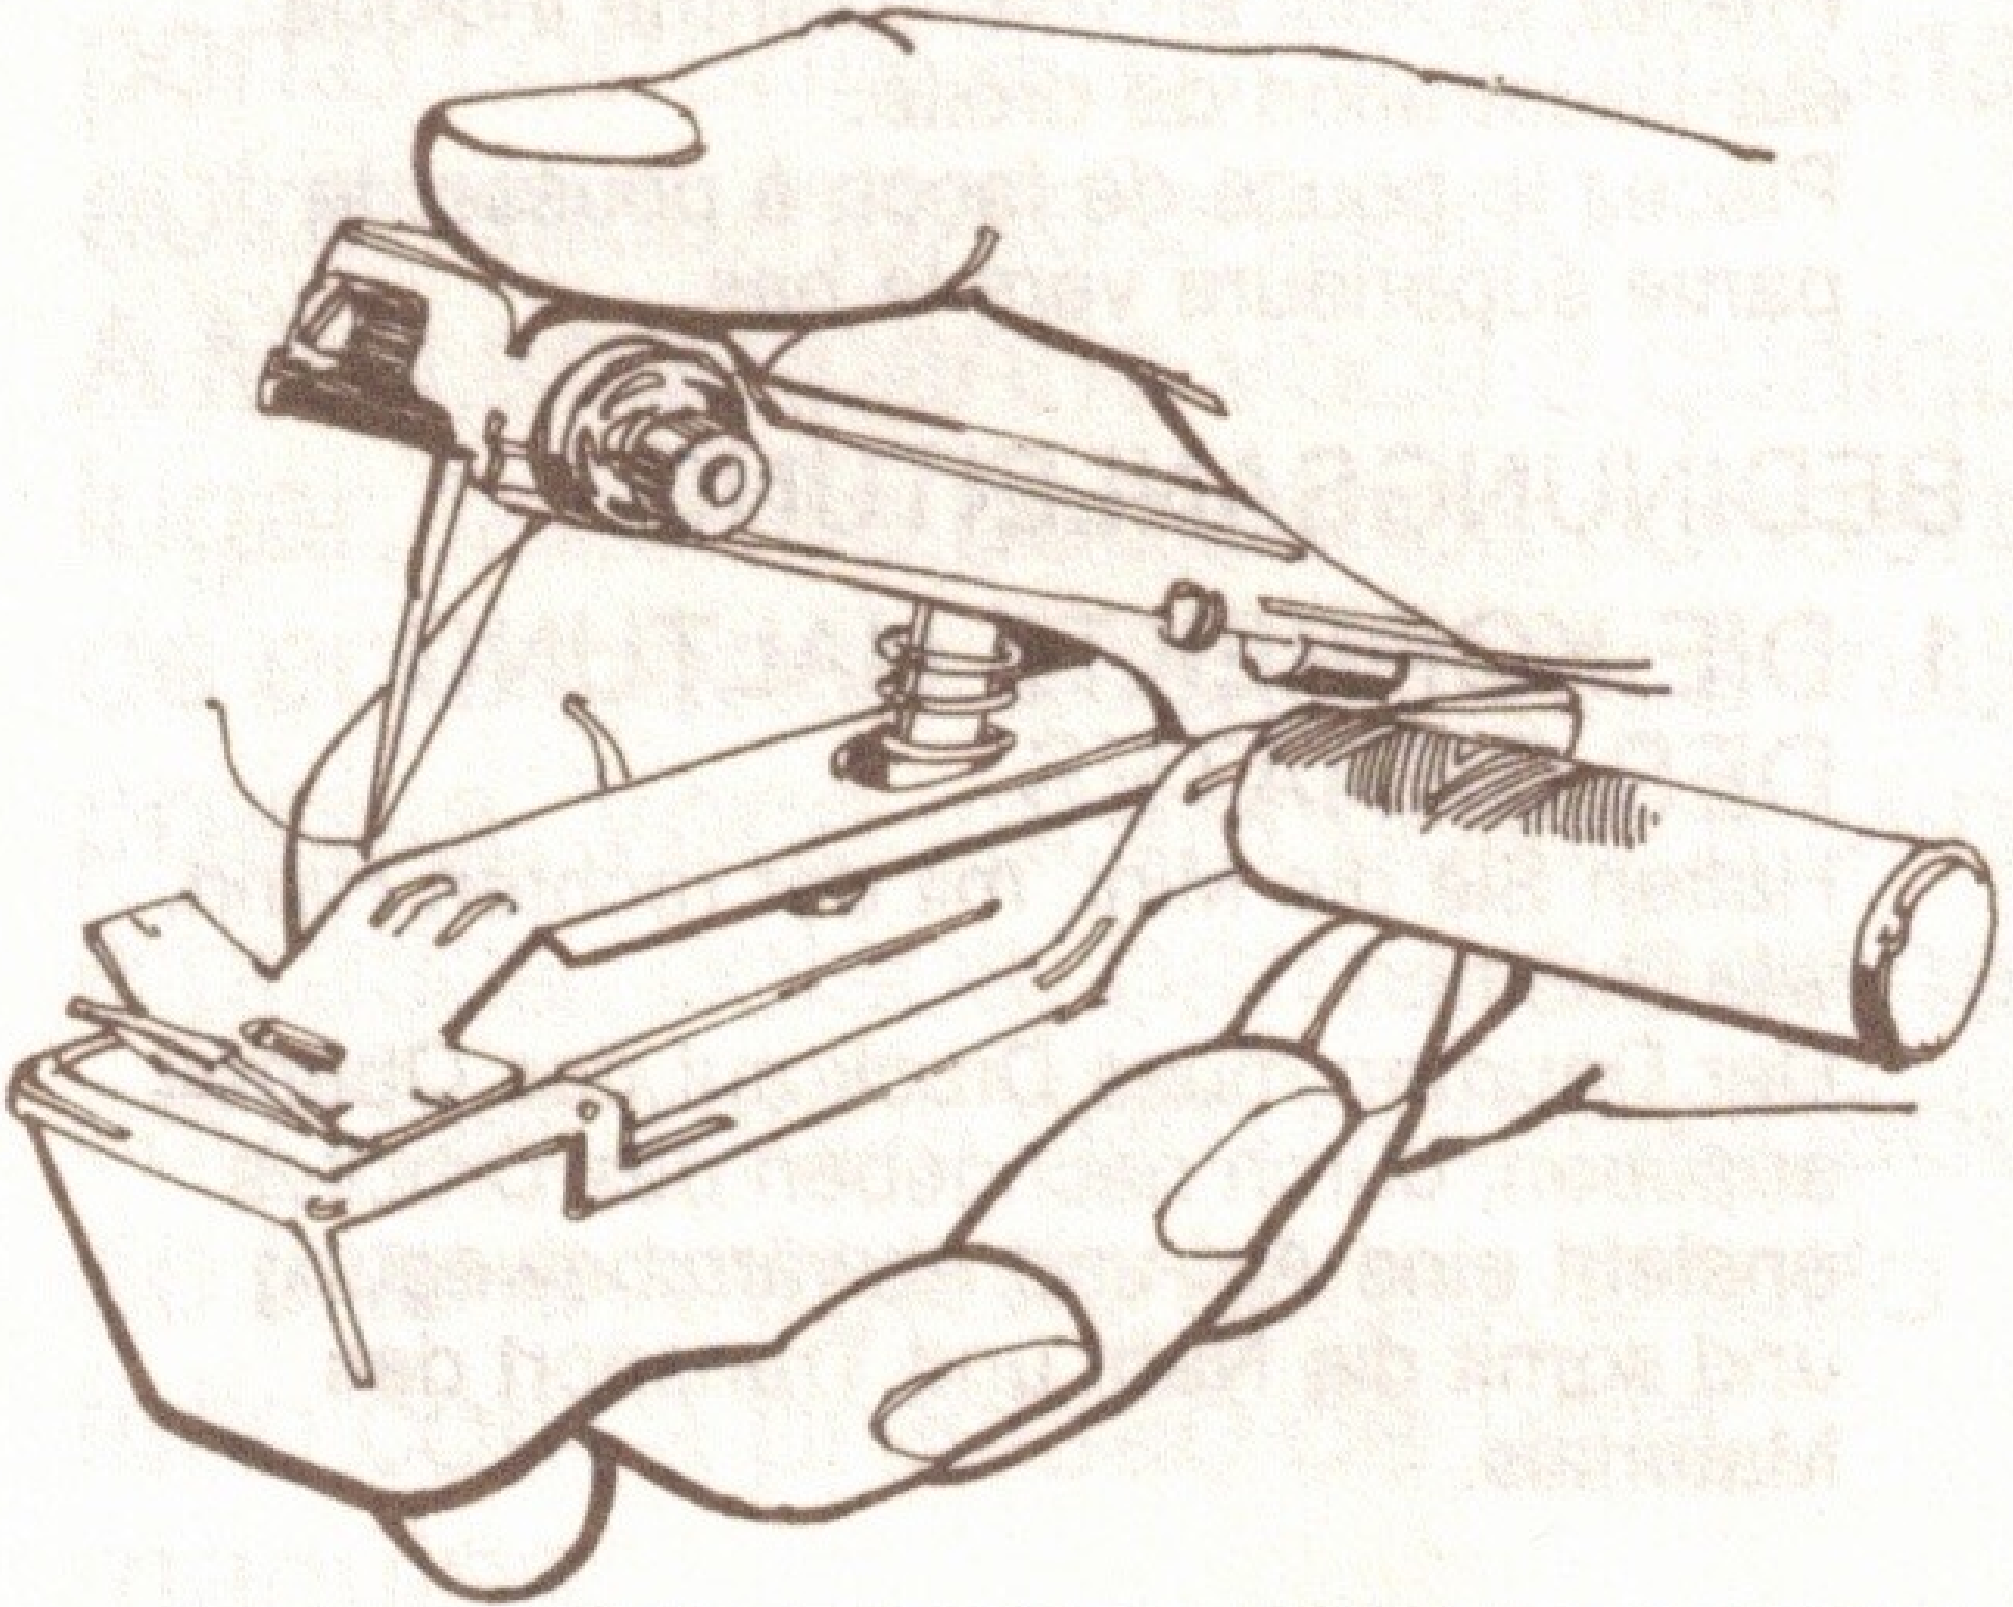

2. HOW TO FASTEN THREAD SPOOL

Pass spool-carrying pin (1) through thread spool.
Next, fit spool pin into hole (2) on lower bed of sewing apparatus.
To obtain more uniform stitching, place felt (3) between spool pin and hole (2).
Should spool fail to turn properly, unloosen pin just a little.

IMPORTANT NOTICE:
For thread spools shorter than spool-carrying pin (Fig. B), first place disc (4), then press it down slightly until spool is firmly adjusted to apparatus base.
Besides, follow previous instructions.

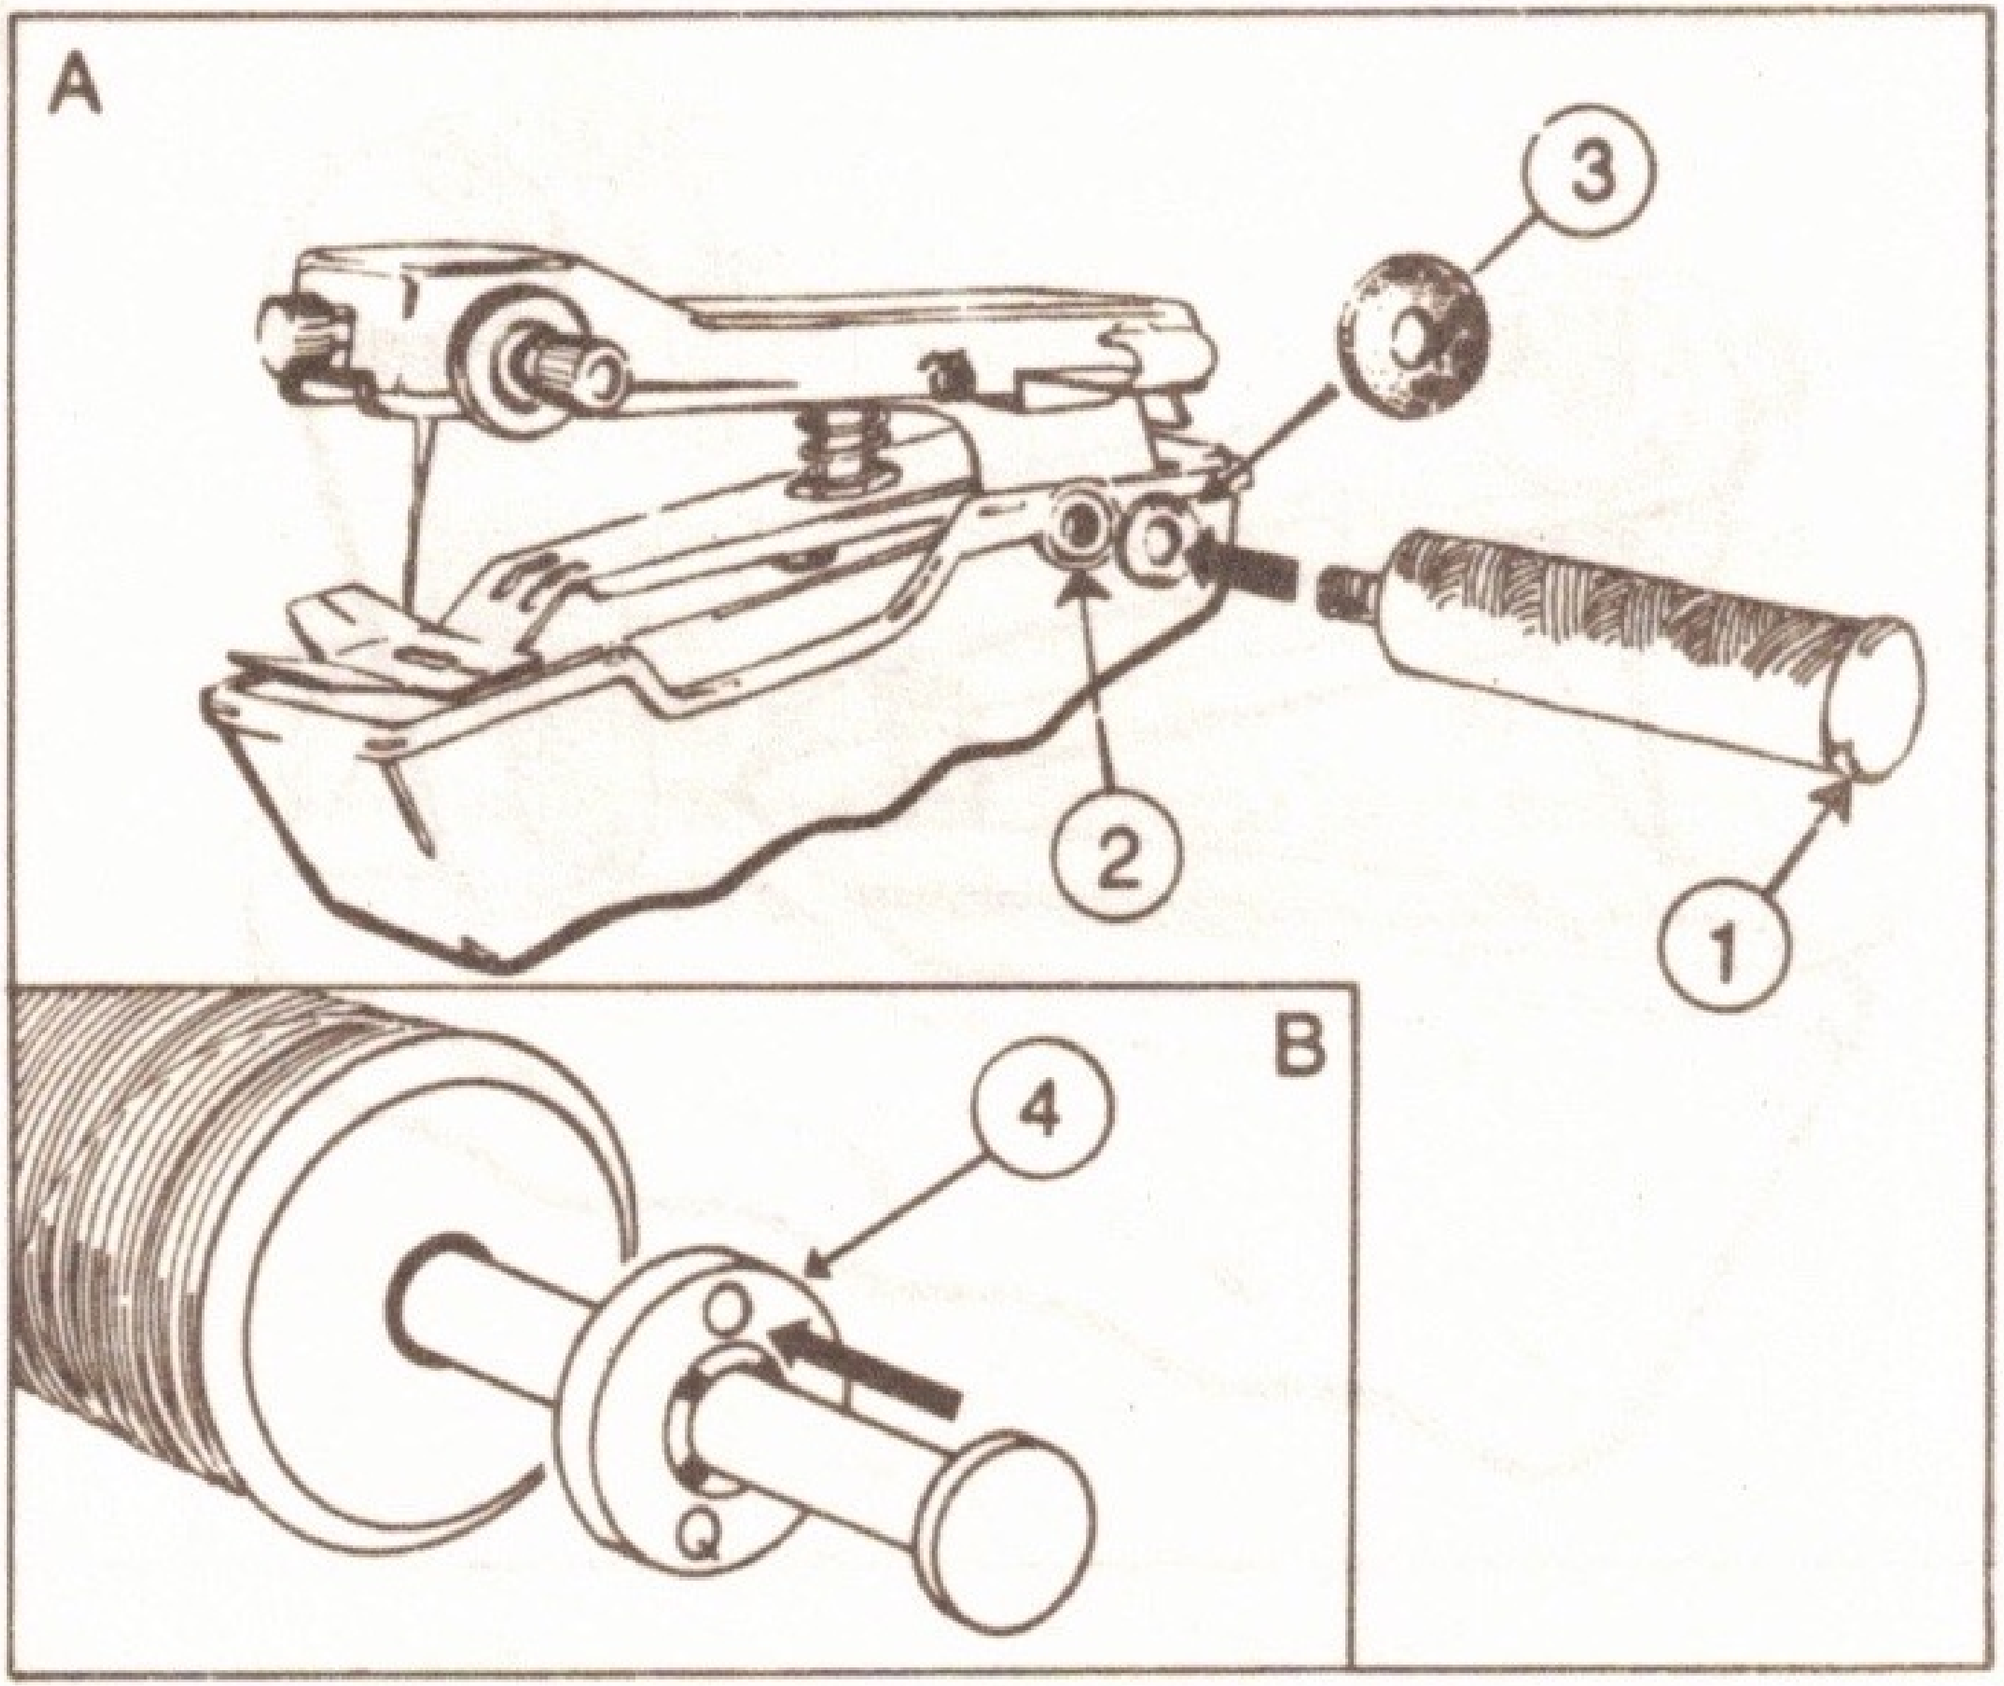
A
3
2
1
B
4
Q

3. THREADING

The thread must pass through first thread guide (1), then between the two tension disks (2), through second thread guide (3), and finally through needle eye, using the enclosed needle threader for greater ease. For best results, number 50 thread is recommended.

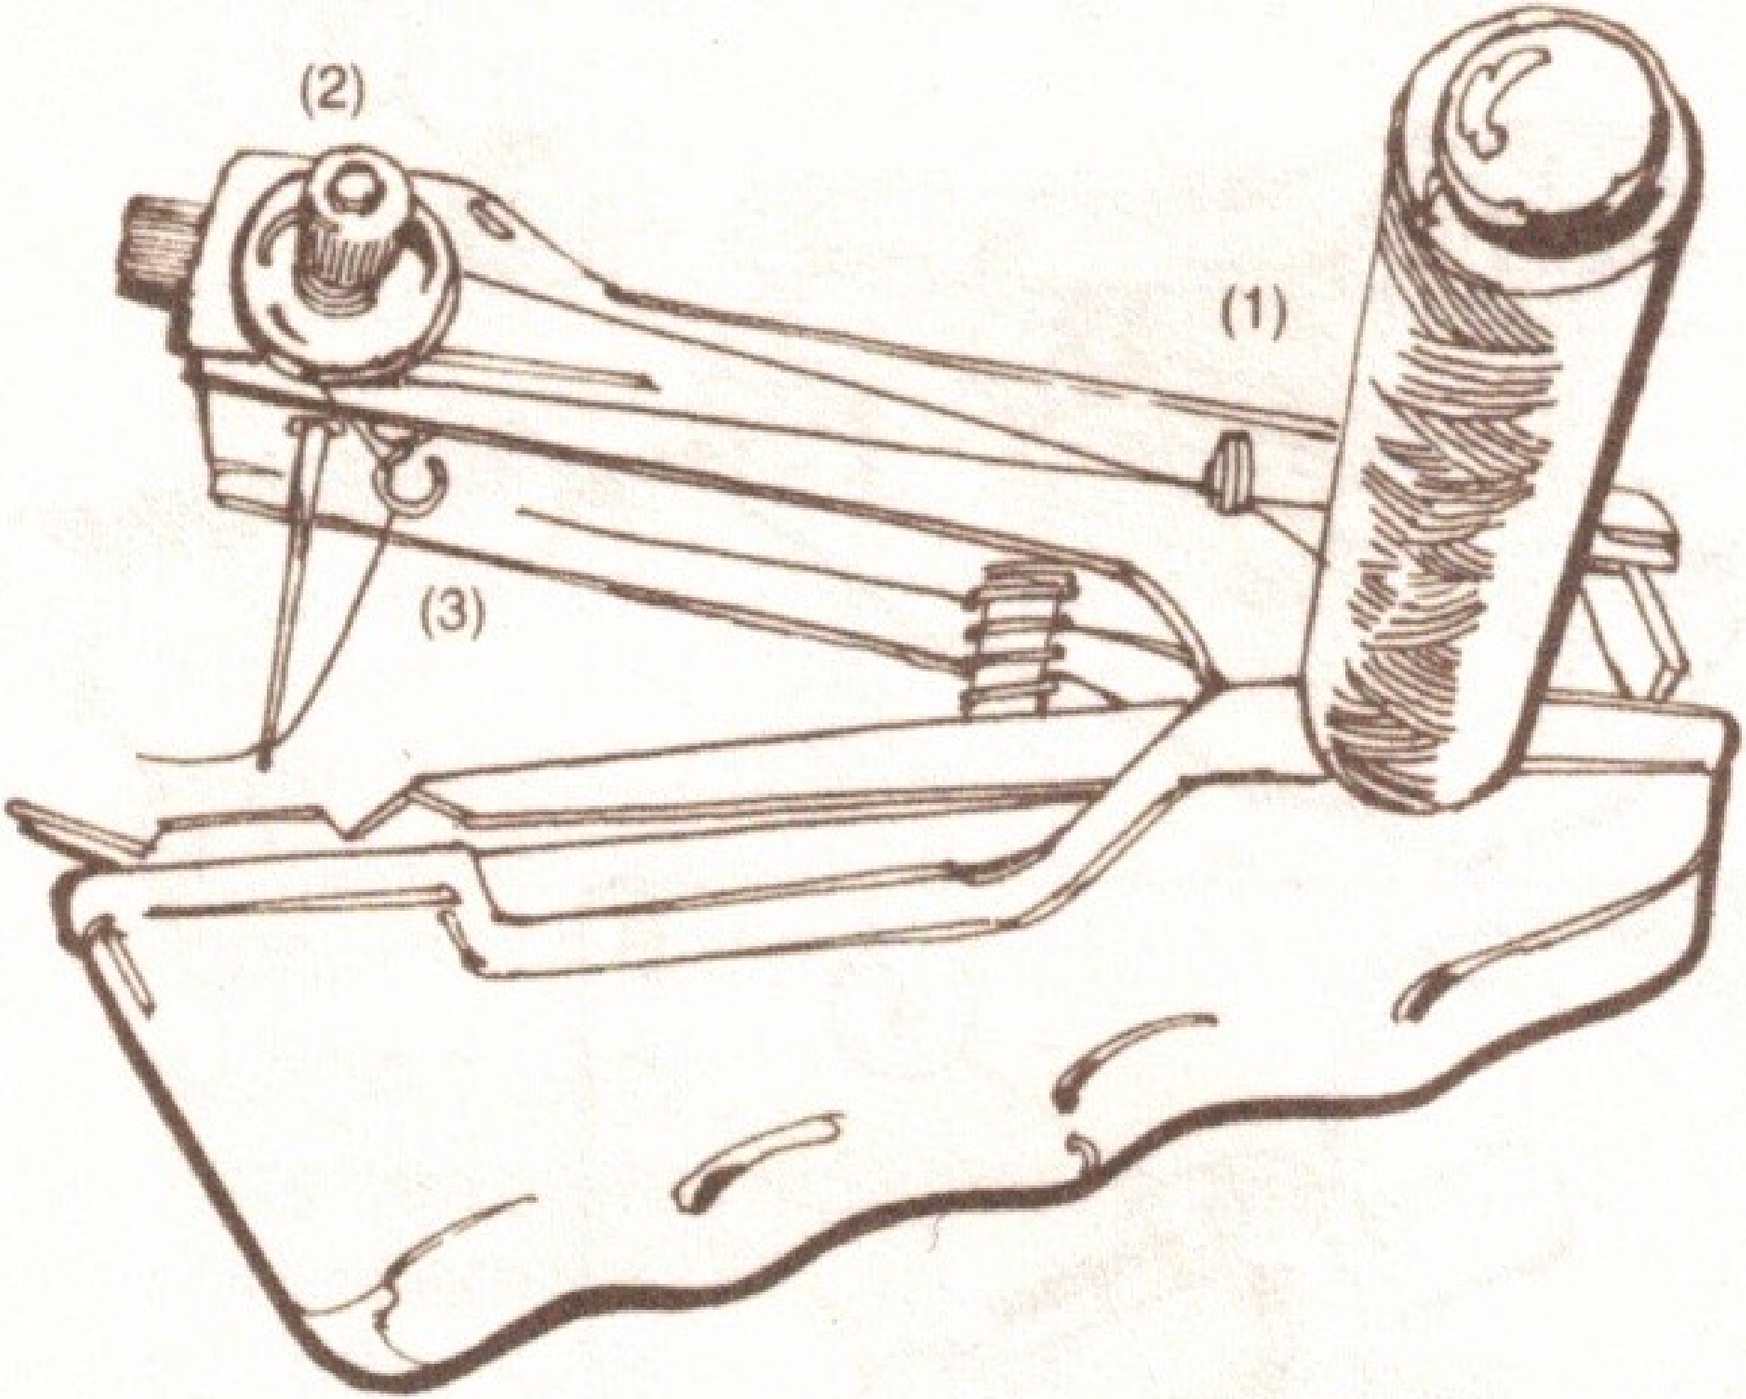
(2)
(1)
(3)

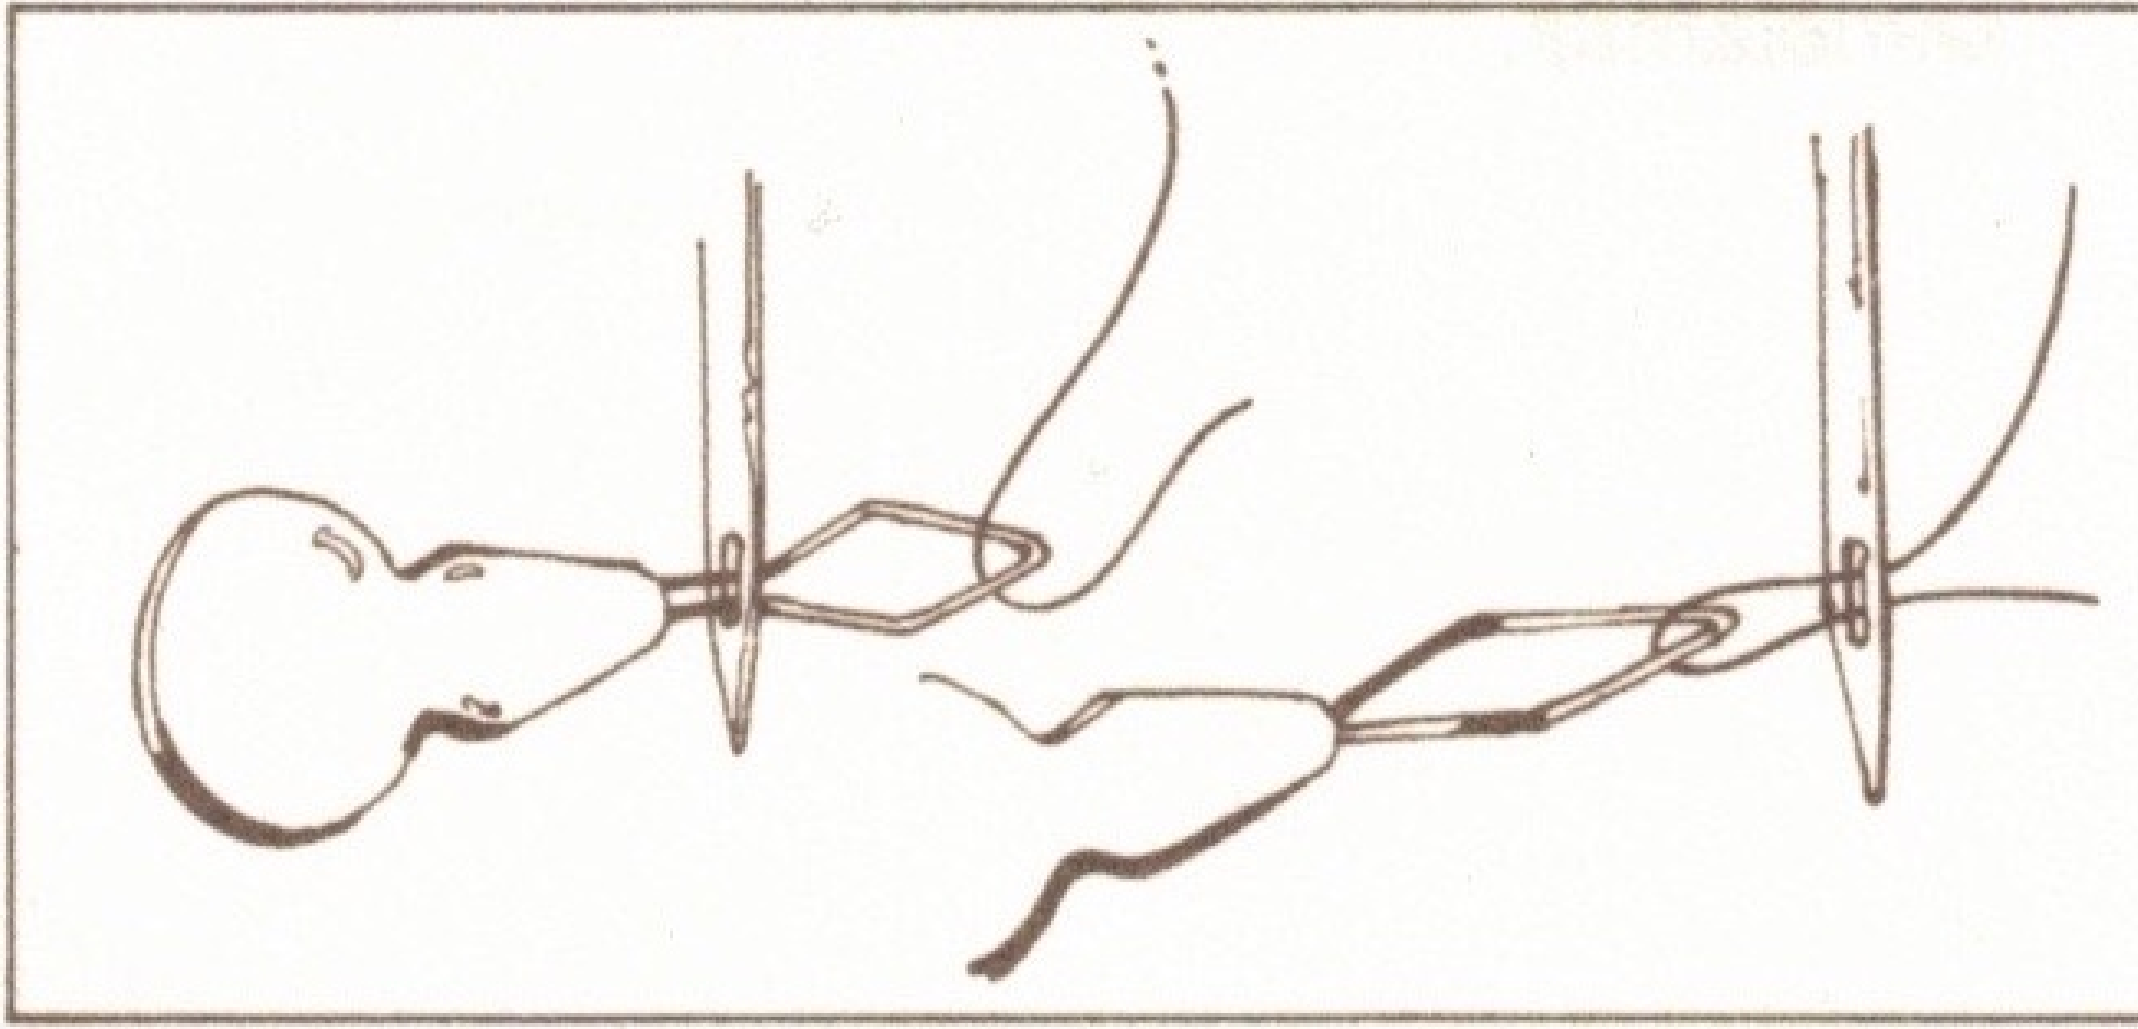

4. POSITIONING FABRIC

Lift presser foot with finger and place fabric underneath.

The Mini was designed to sew on all types of normal weight materials.

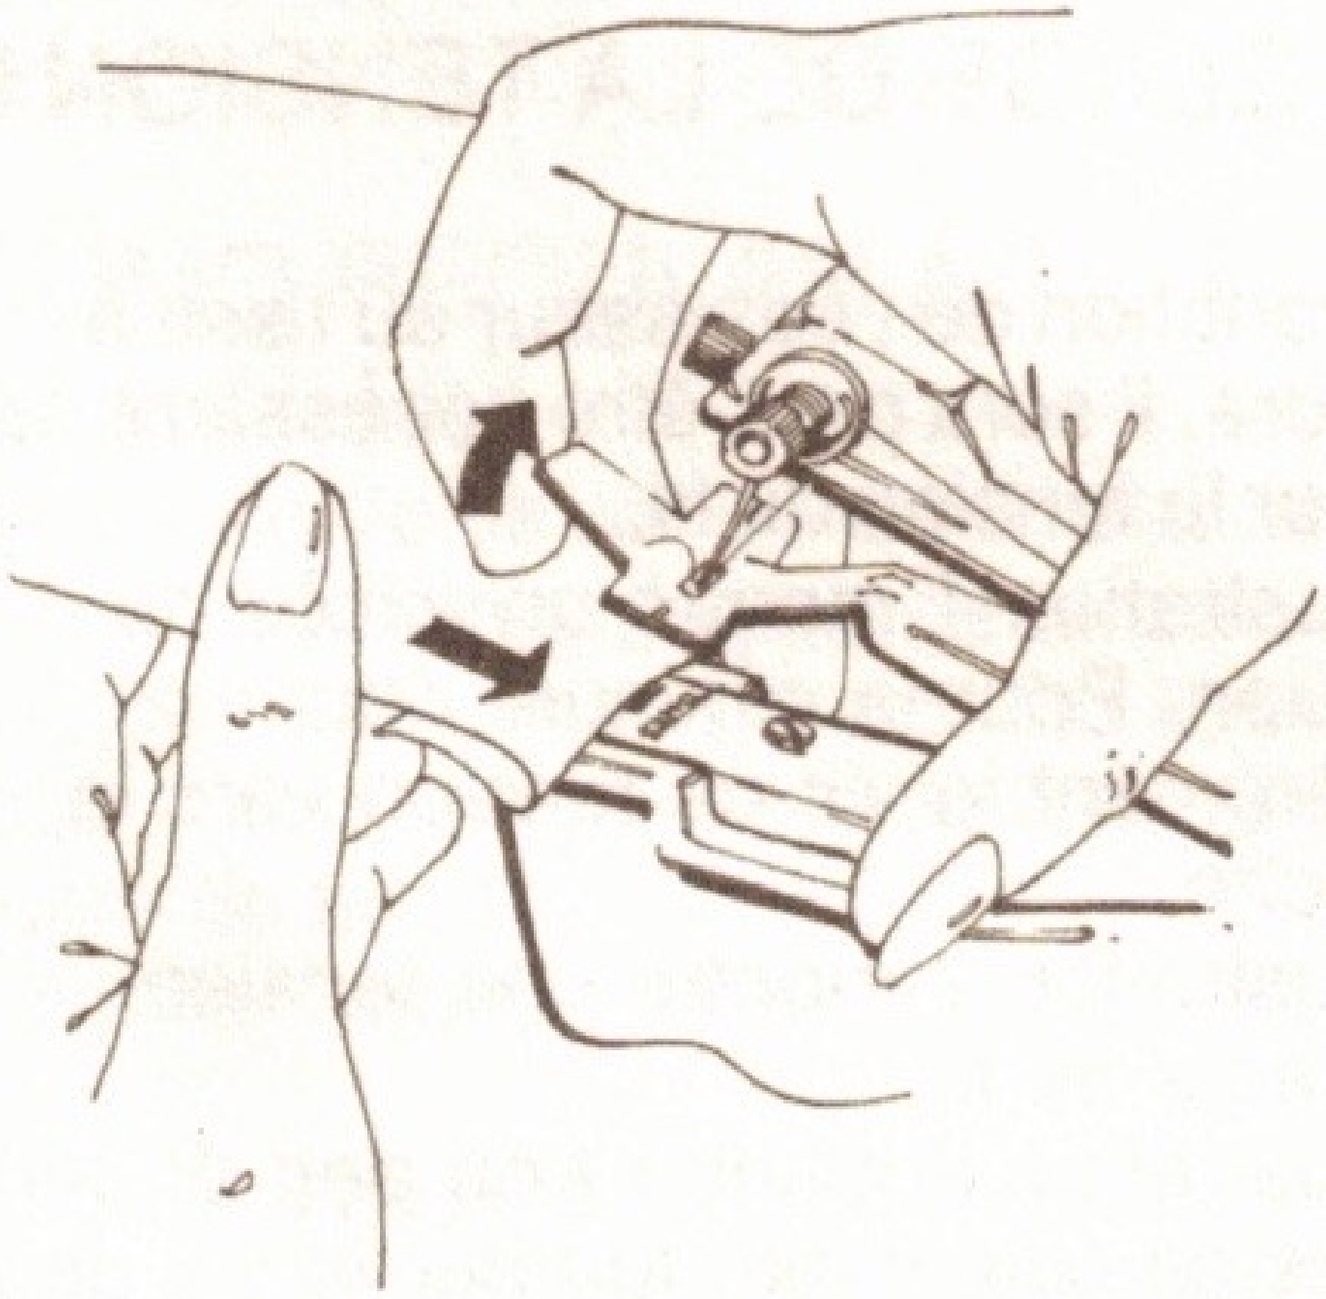

5. REGULATING THREAD TENSION

The varying thicknesses of materials can require adjustments to insure proper thread tension. Figure 1 shows too tight a thread tension: to slacken, turn tension nut slightly to the left. Figure 2 indicates a correct thread tension. Figure 3 illustrates an insufficient tension: to tighten, turn nut slightly to the right.

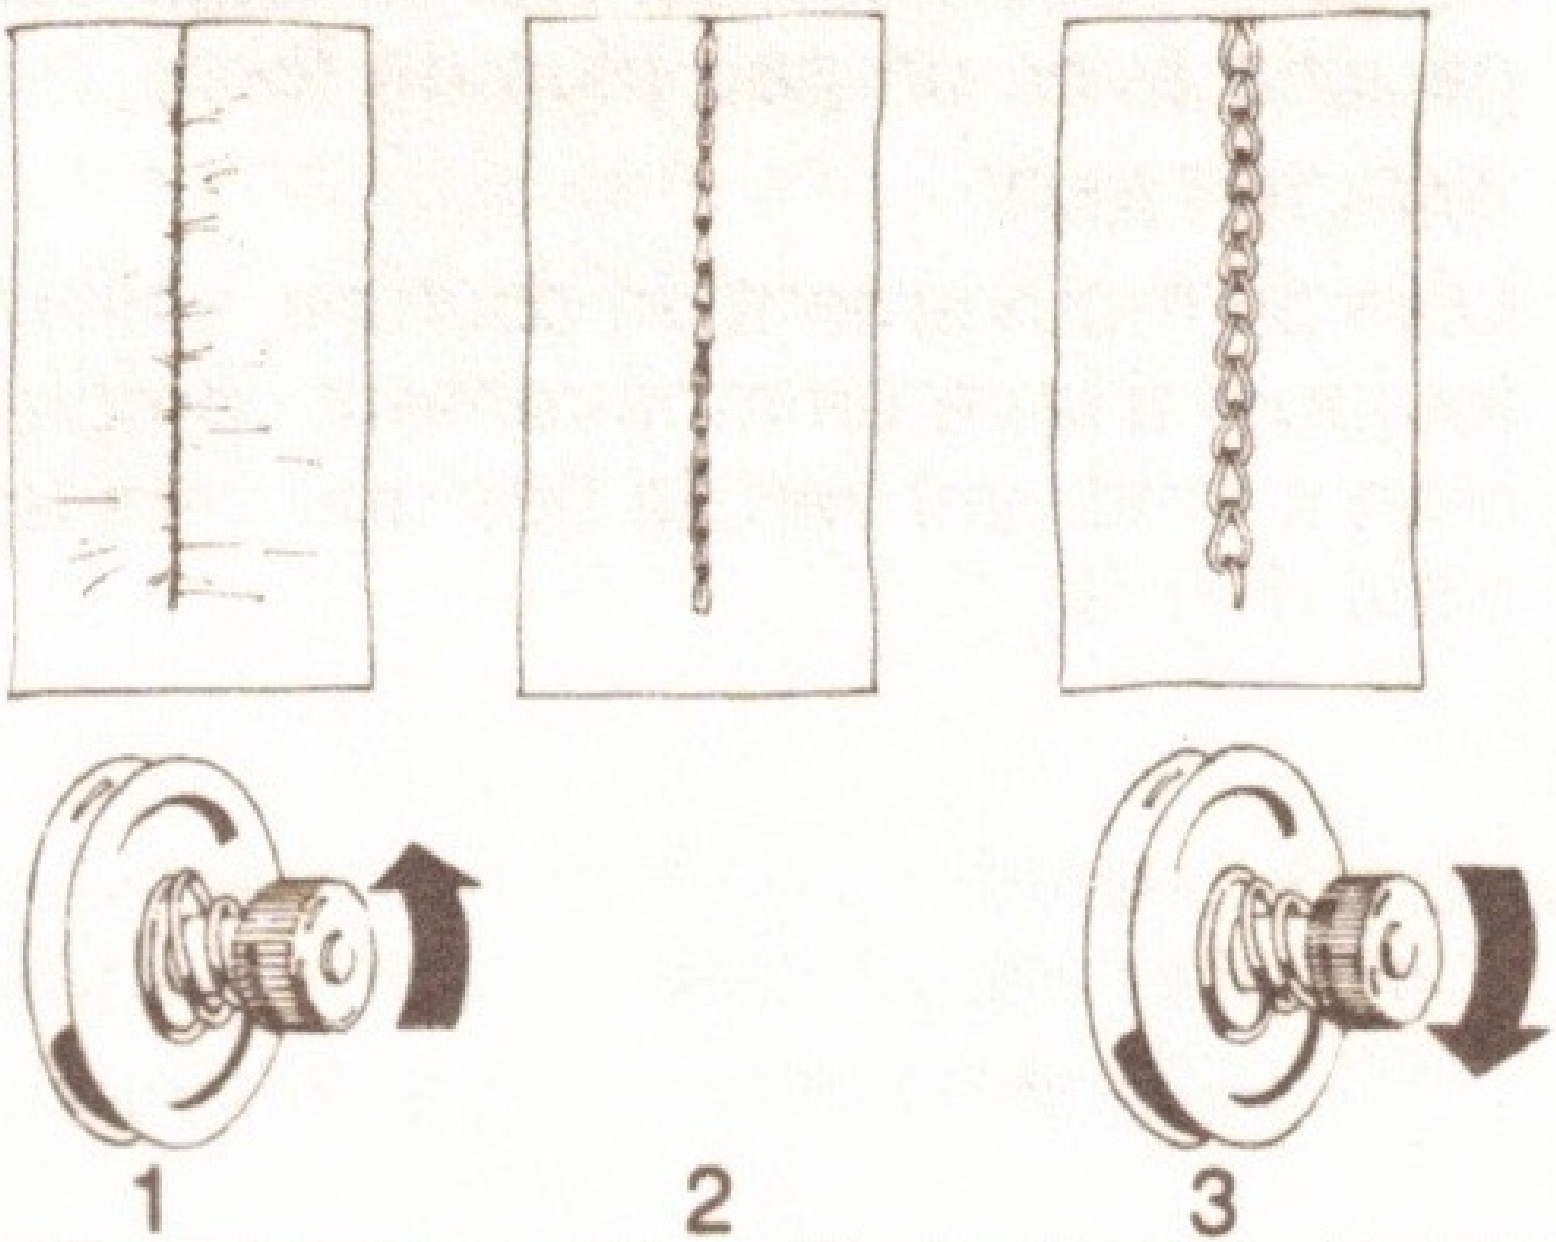
1
2
3

6. SEWING

To insure a proper start, maintain a firm tension during the first stitch (Fig. A). The Mini sews from left to right. The fabric should be pulled gently from right to left, opposite from the direction sewn (Fig. B). Pressing down and then releasing the upper part of the Mini with the right hand, the fabric feeds through with each stitch. If longer stitches are desired, pull the fabric leftward with slightly greater effort.

IMPORTANT:
Each stitch should be made in a full, complete action, pressing the upper portion all the way down, and allowing it to spring all the way back (Fig.C).

A

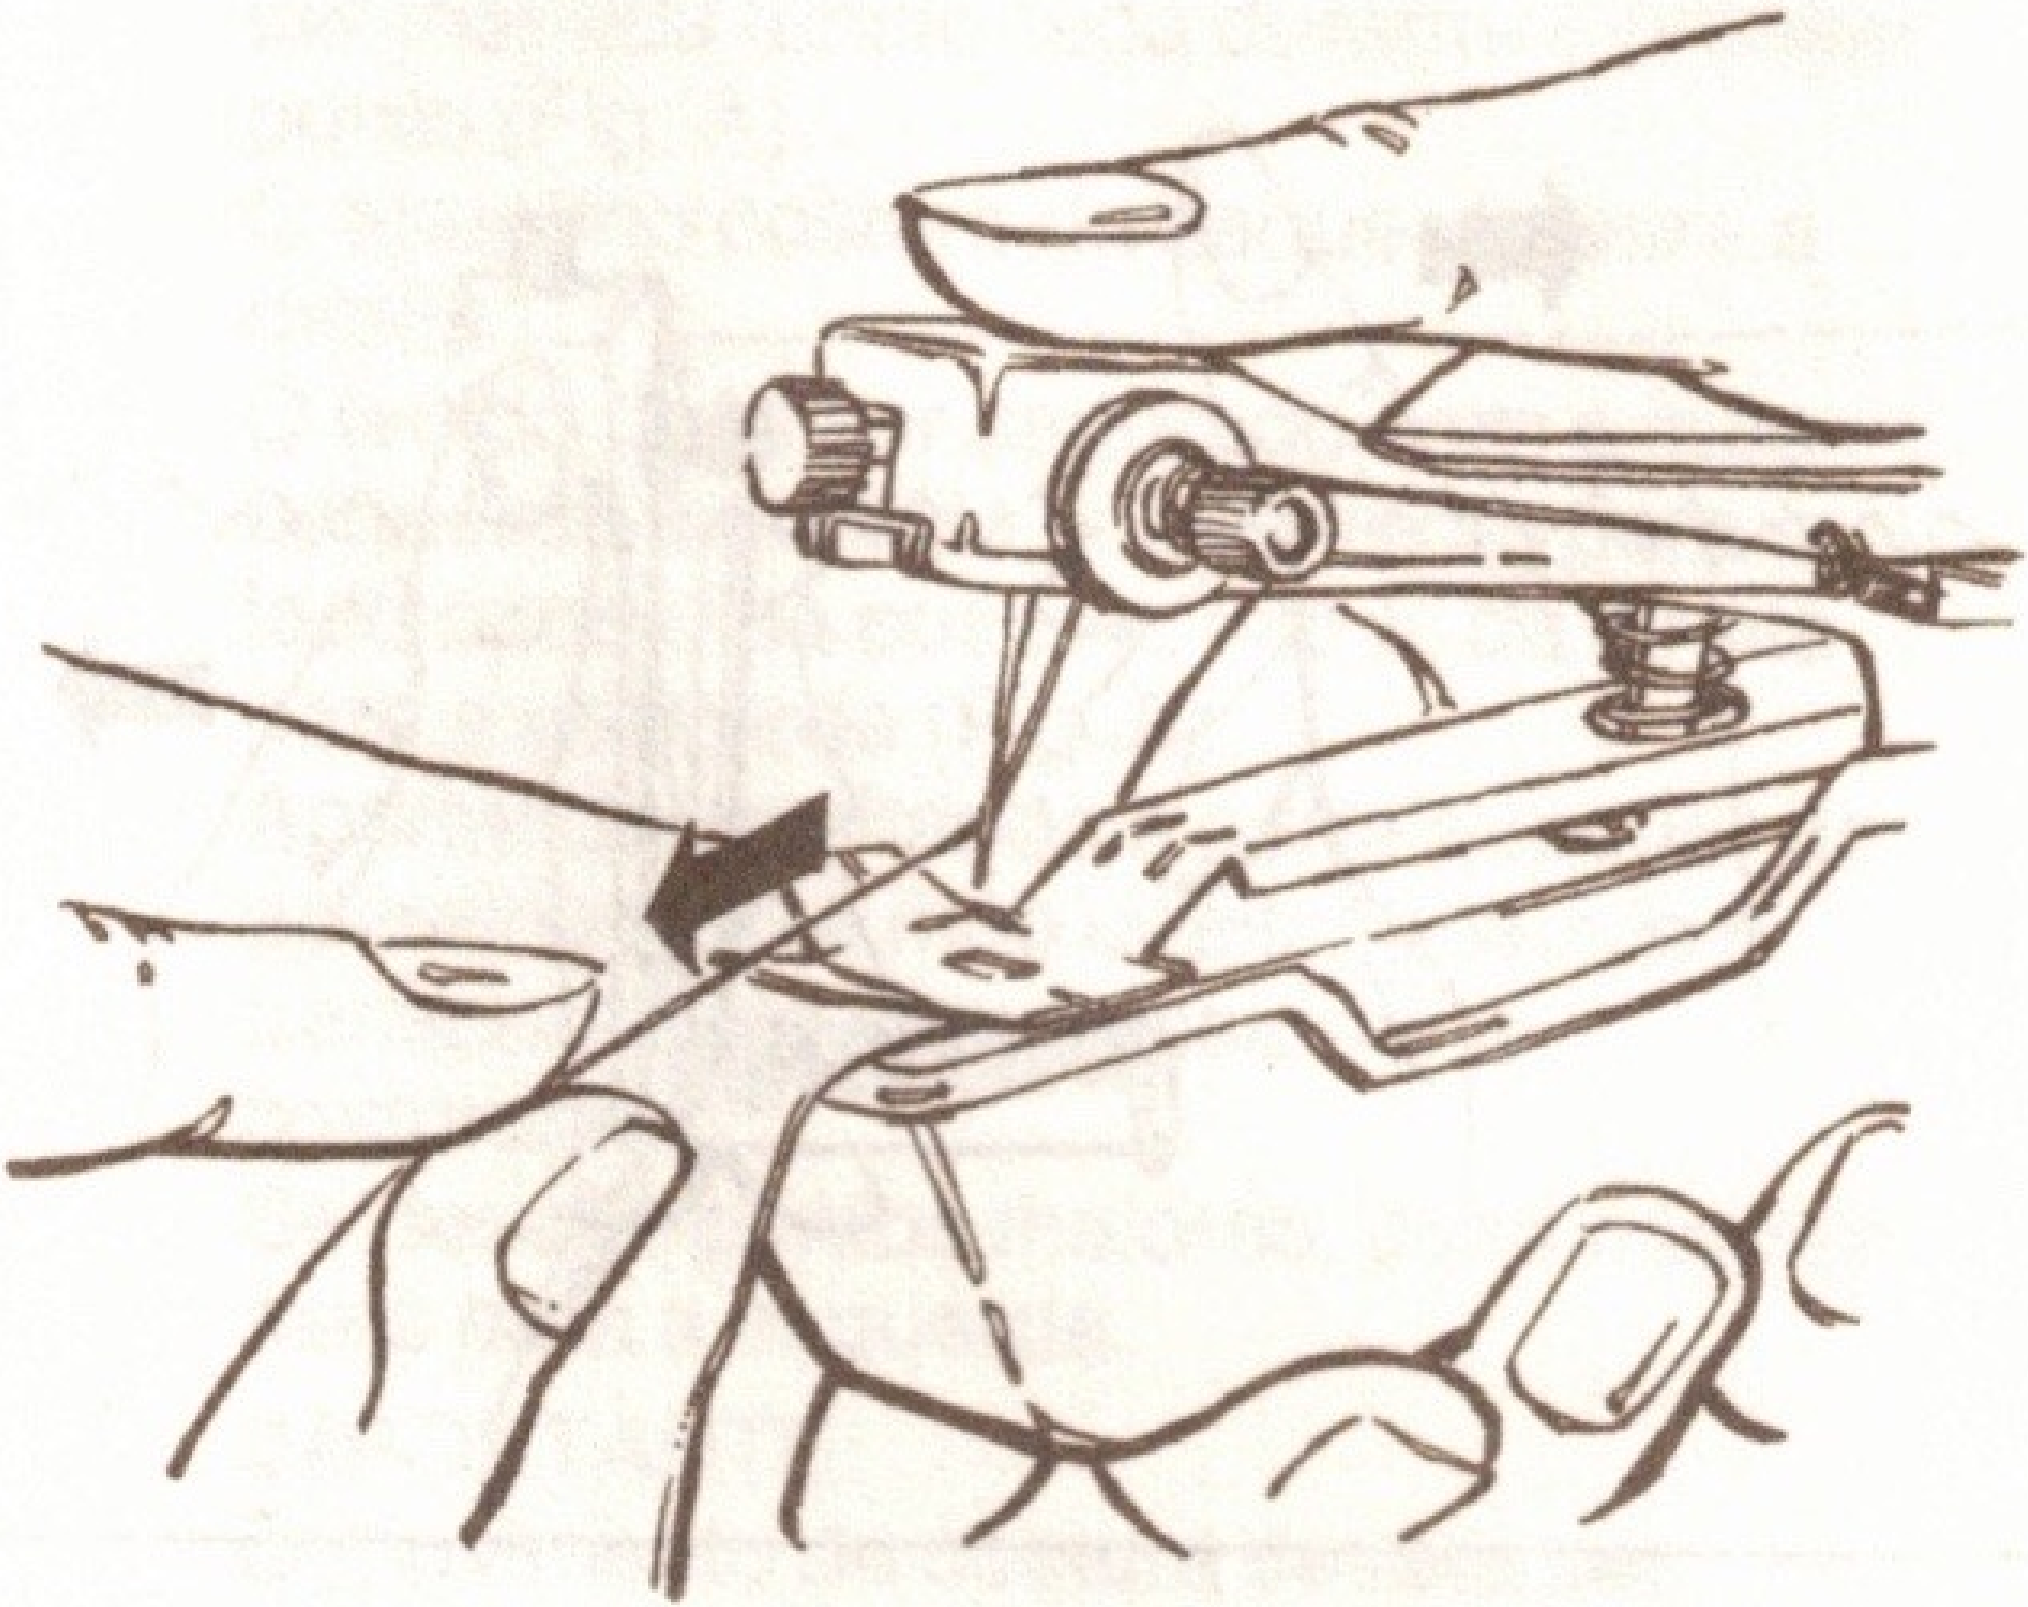

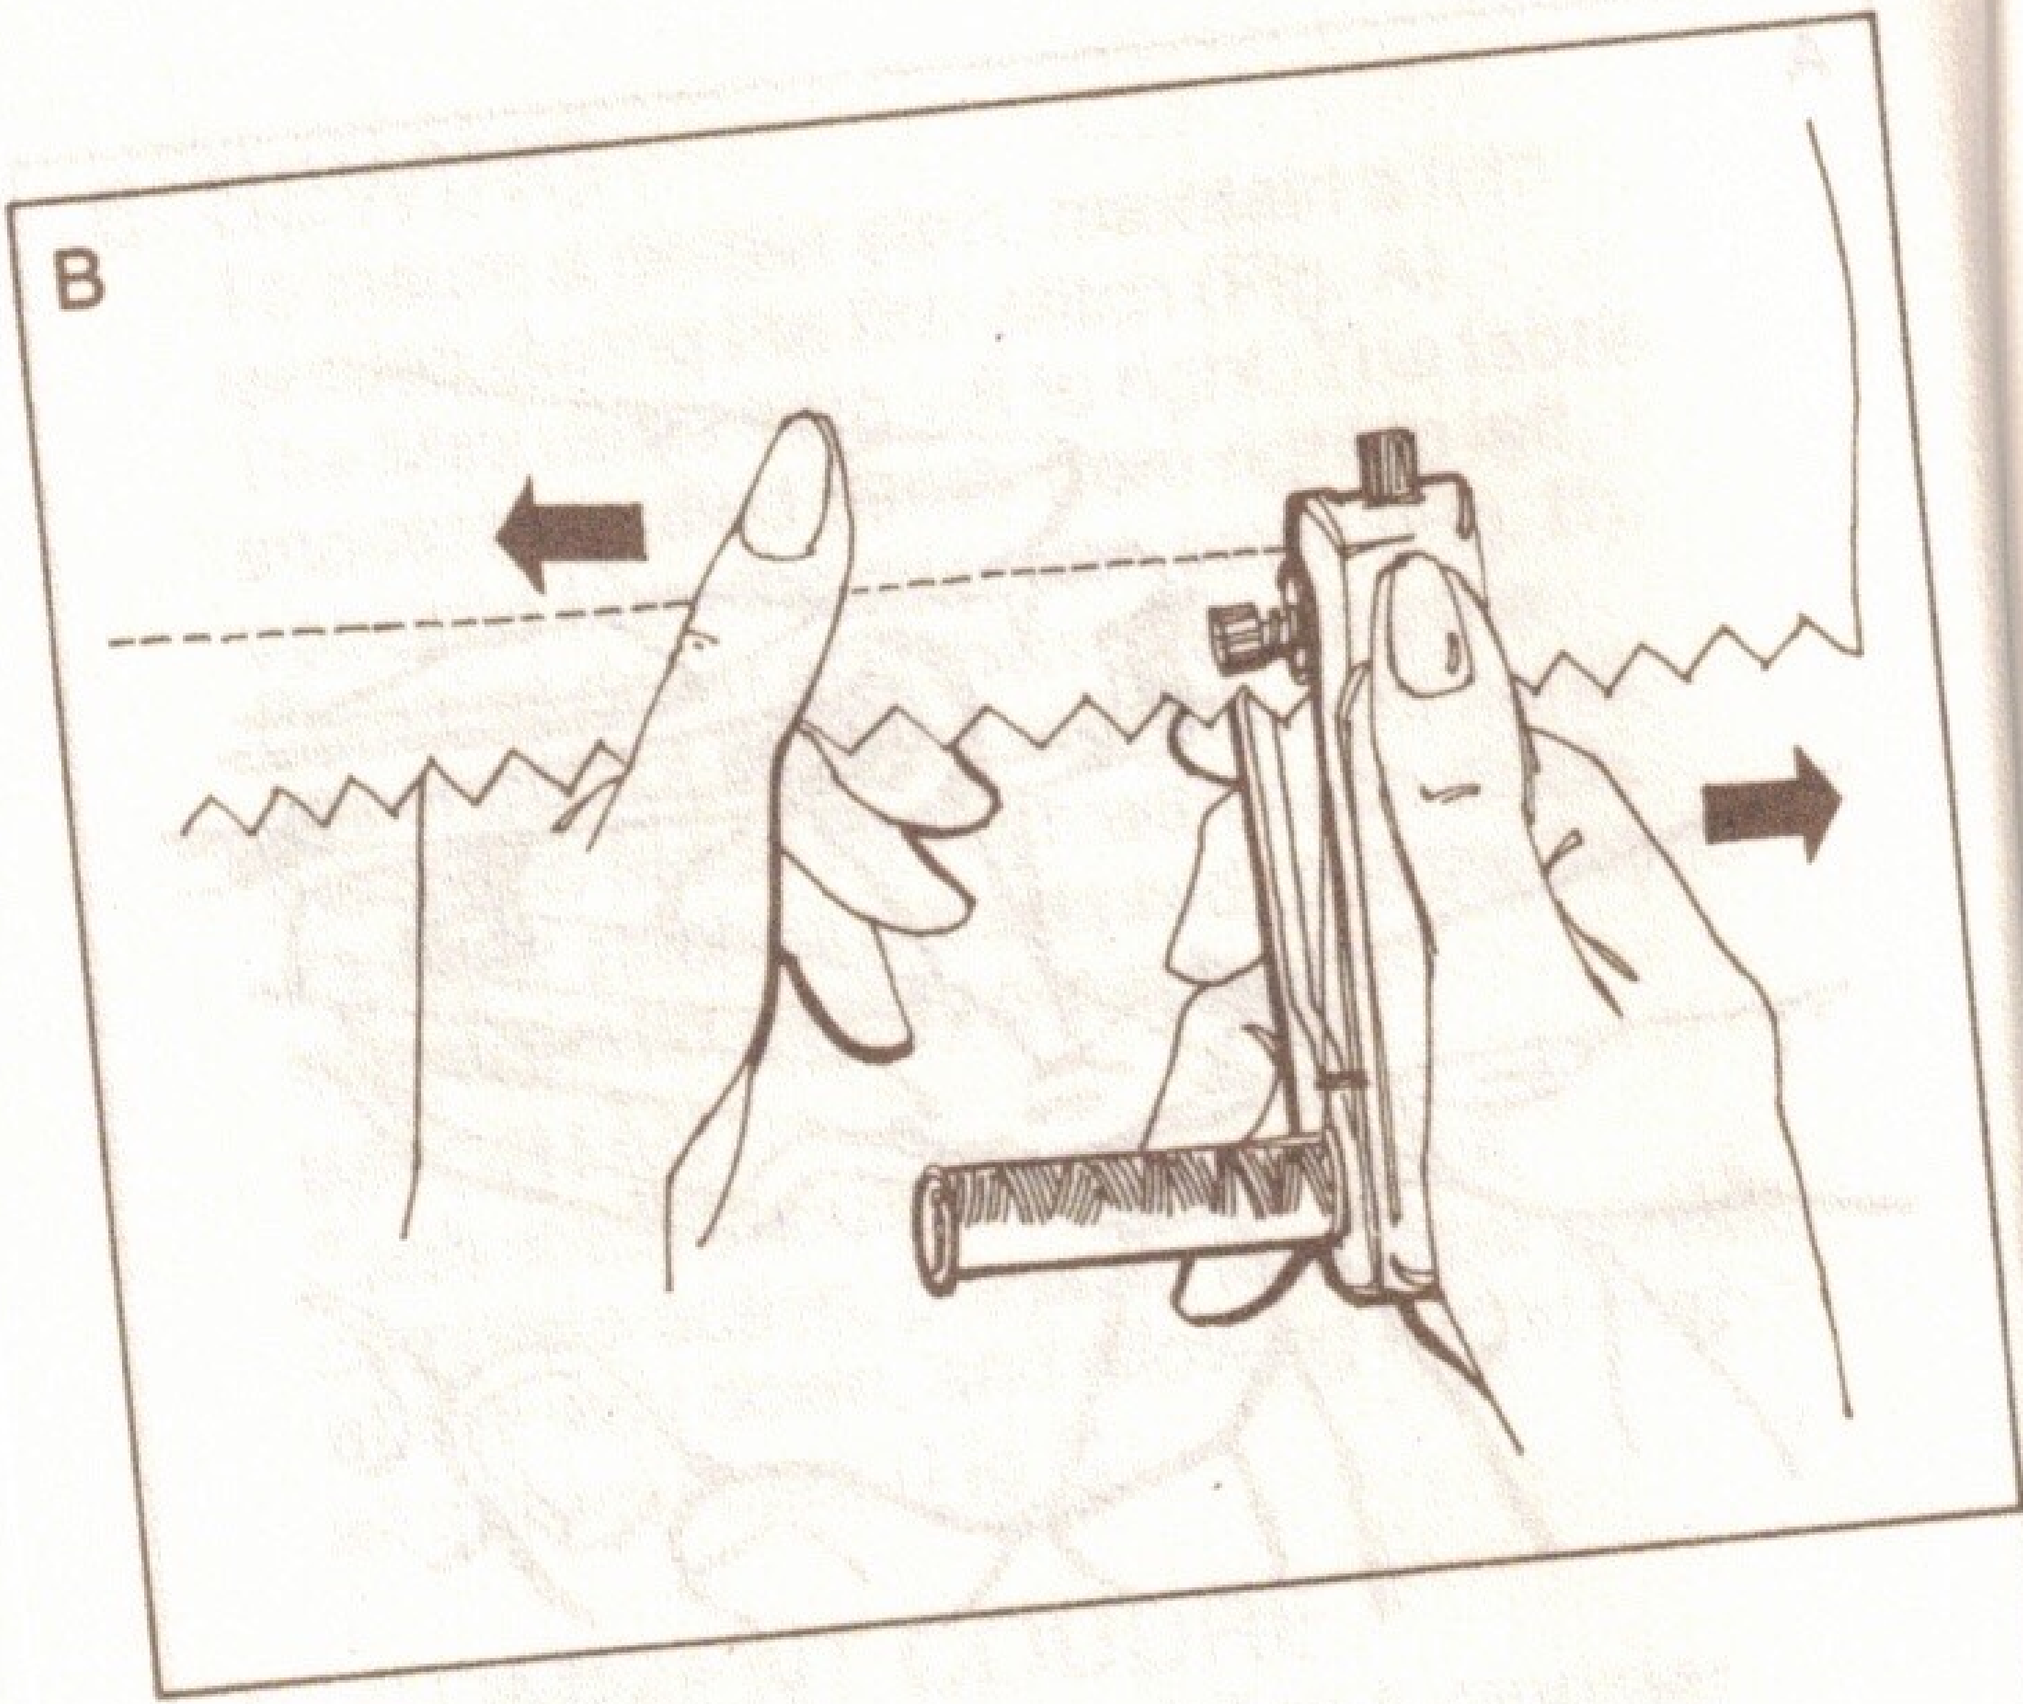
B

C

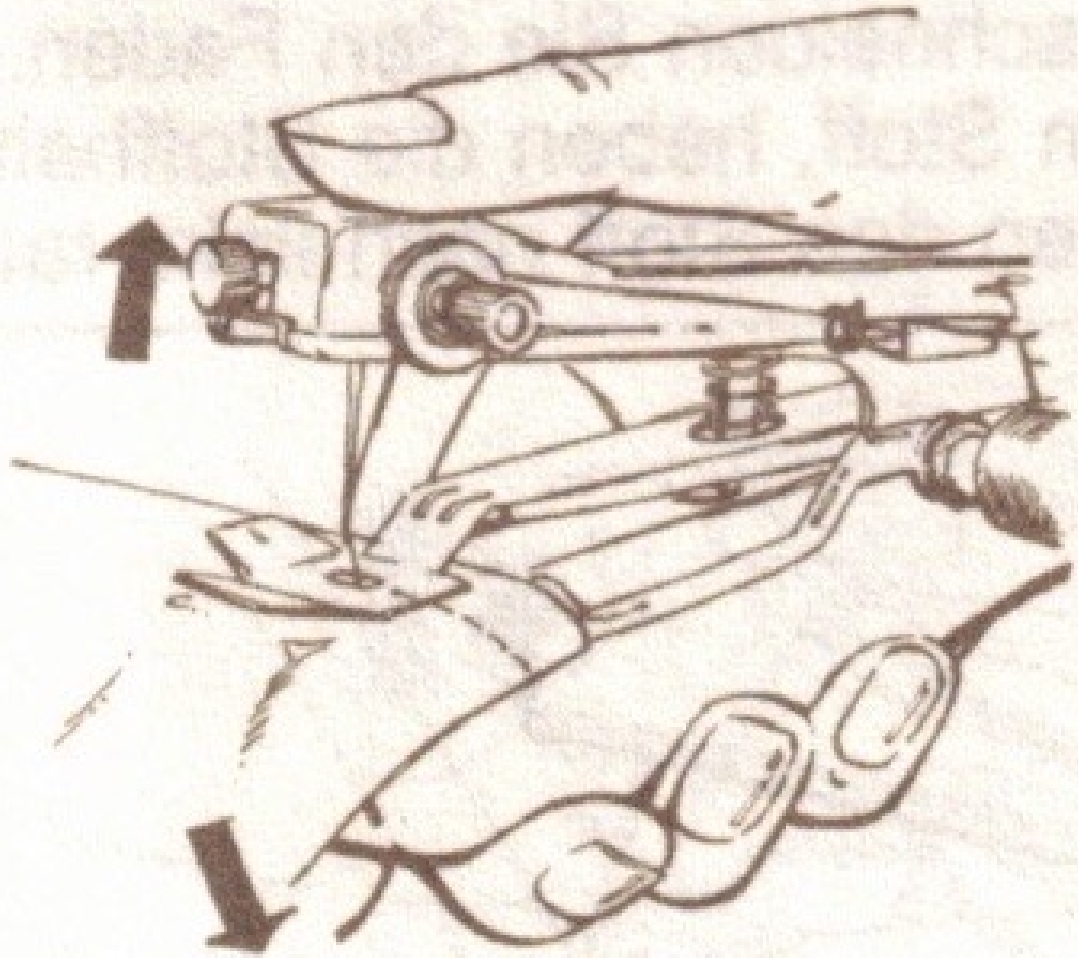

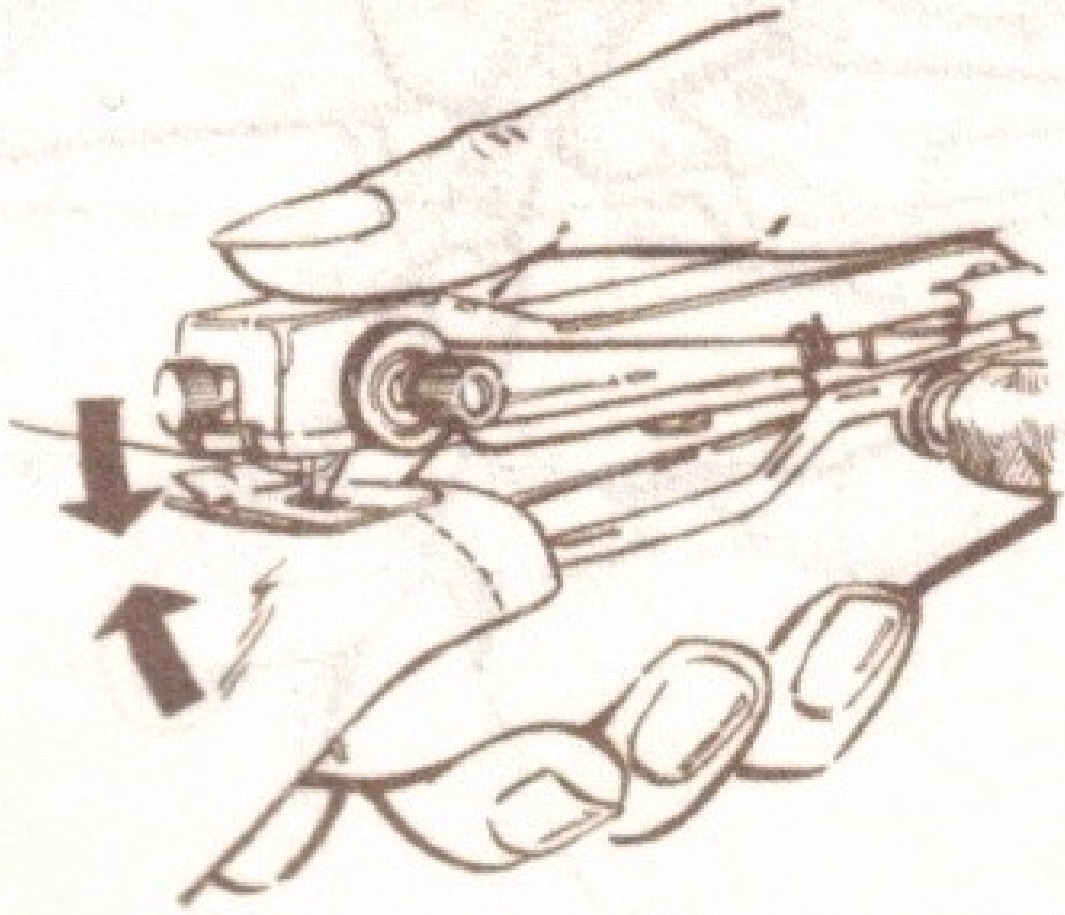

7. FINISHING

After making final stitch, lift presser foot, back up two stitches, lower presser foot and repeat the last two stitches.
With scissors, cut thread close to fabric, lift presser foot again, and pull fabric away.

über dem
und ziehen den Stoff nach links rau

A

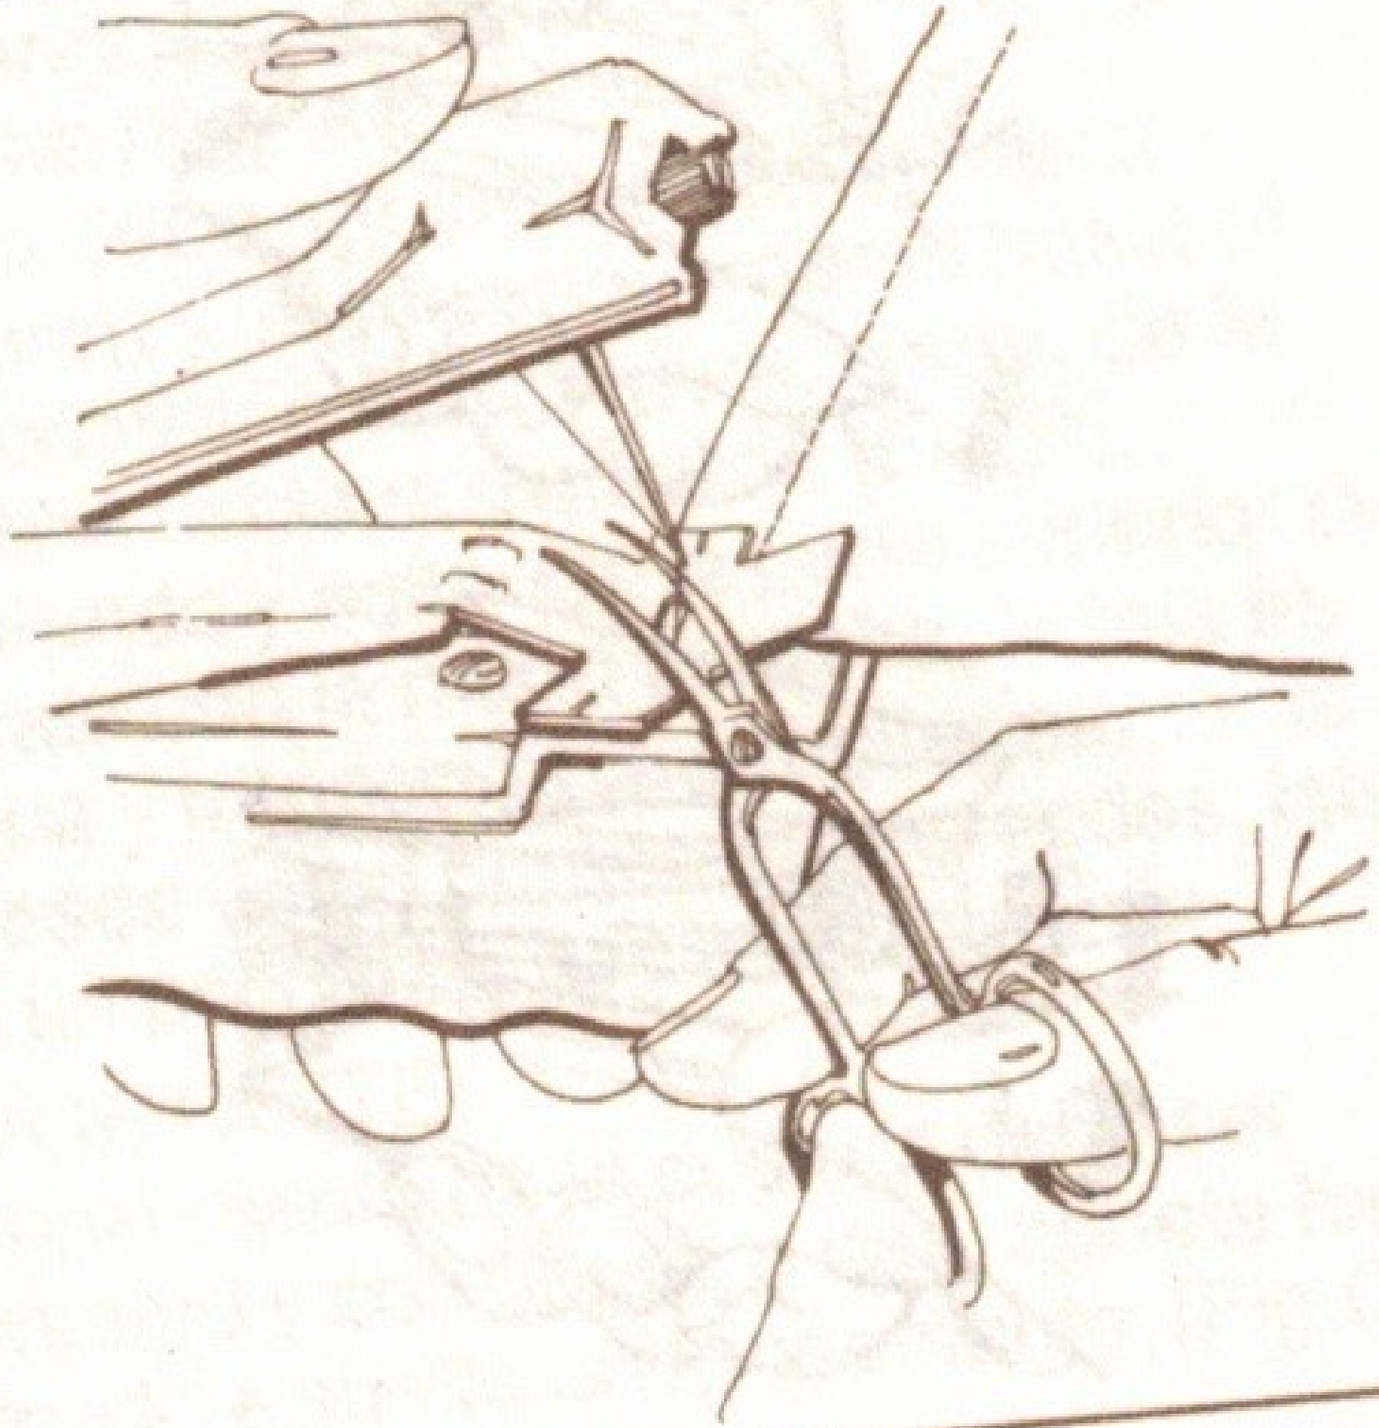

B

8. CHANGING THE NEEDLE

1. Loosen the holding screw and remove needle.
2. Insert new needle to the hilt with flat side forward, facing holding screw (see figure).
3. Firmly tighten holding screw.

X – incorrect
O – correct

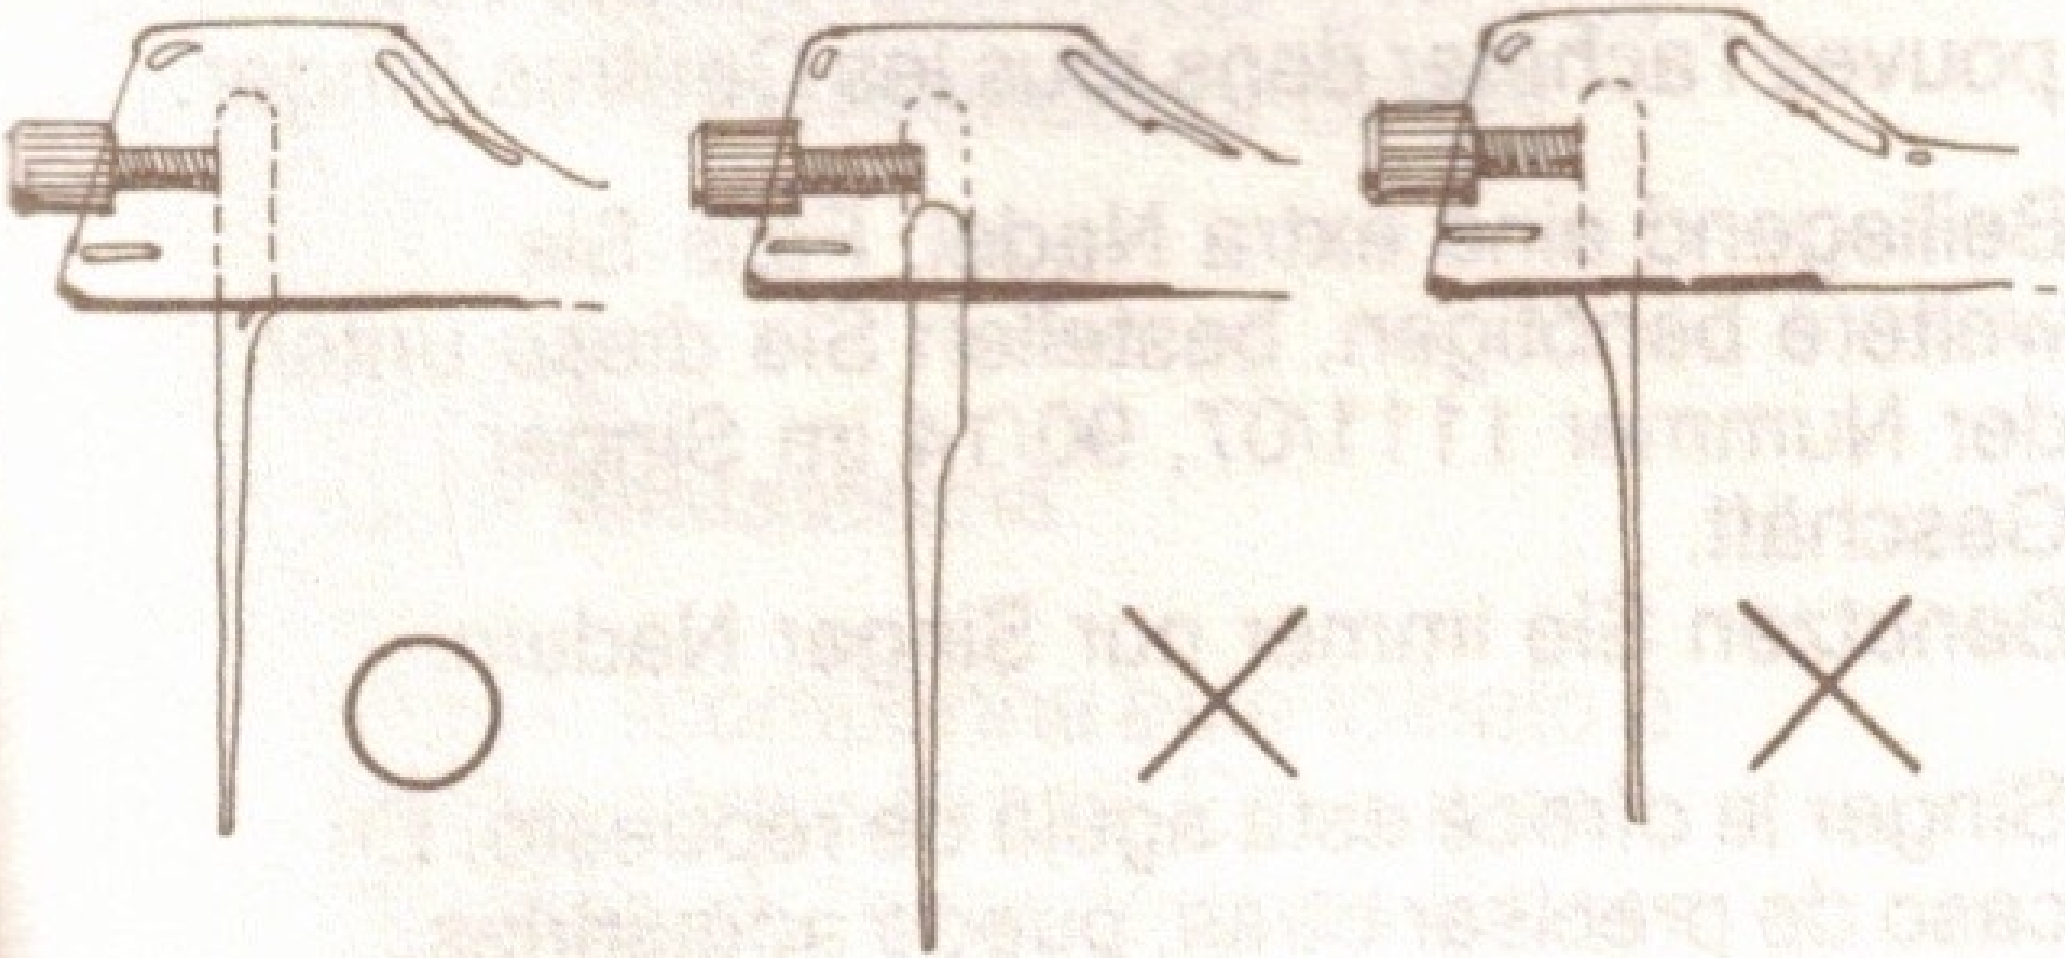

The Singer Company is providing you with this free extra needle. Additional needles (code 1111/07, 90/14) may be ordered from any Singer Repair Center.

* Marca registrada da The Singer Company.